


**INSTALLATION INSTRUCTIONS FOR BEST  
KEY & TURN KNOB EURO CYLINDER**

**8E7E6 - 360**

1. Prepare Door - refer to lock manufacturer's specifications.

This will require modification on the key side of any handleset plate or escutcheon to accept the Best removable core.  
See illustration on right

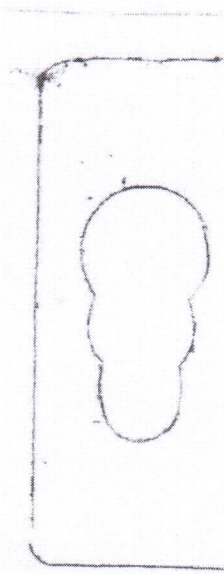

2. Prepare cylinder to accept core.

**A. Position the Throw Plug**

(1) Position cylinder with turn knob facing away and at the top. Looking into the figure 8' hole, identify throw plug with drive pins, and central locating pin. Position central locating pin above drive pins.

(2) Insert core

3. With door open, check operation of lockset.