

INSTALLATION INSTRUCTIONS FOR BEST KEY & TURN KNOB EURO CYLINDER

8E7E6

1. Prepare Door Furniture on outside of door. A slight alteration must be made to the external cover plate / escutcheon of the lock furniture in order to accommodate the extra thickness of the lower section of the core. (see diagram below). A tool to modify the cover plate / escutcheon is available from Wadsworth Security. **No alteration is necessary to the lock case itself.**

Handing

Right Hand Door - From outside (key side) door hinged on Right

Left Hand Door - From outside (key side) door hinged on Left

2. Install Cylinder

- A. Right Hand Door: be certain lock deadbolt is in retracted position before inserting cylinder (cam toward hinges) Tighten cylinder screw.
- B. Left Hand Door: be certain lock deadbolt is in extended position before inserting cylinder (cam toward deadbolt) Tighten cylinder screw.

3. Prepare cylinder to accept core.

A. Position the Throw Plug

- (1) Position cylinder with turn knob facing away and at the top. Looking into the 'figure 8' hole, identify throw plug with drive pins.
- (2) Rotate throw pins fully clockwise with mortise tool ED211 or screwdriver. Then rotate throw pins counter-clockwise about just under 1 turn until they are 7-1/2 degrees from horizontal position. Cam must be positioned on right side of housing.
- (3) Insert core

4. With door open, check operation of lockset.

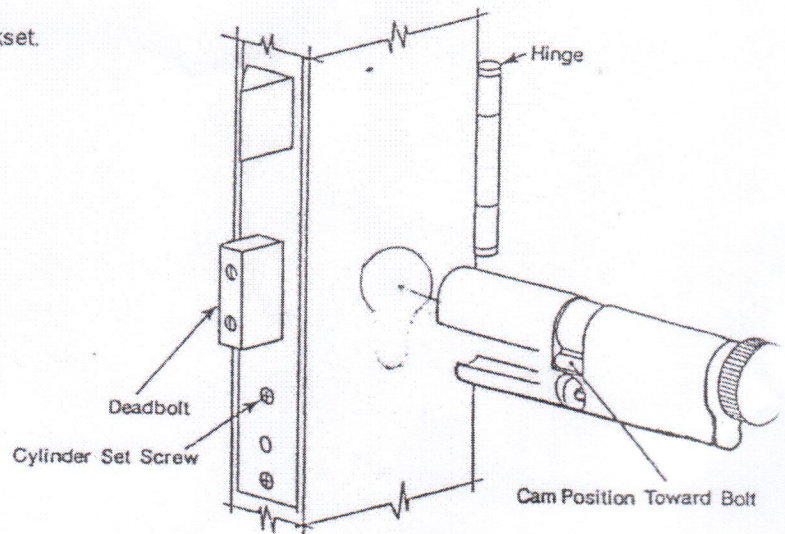
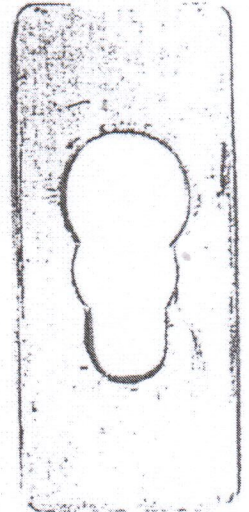


Fig. 2
(LH Illustrated)